




P82.60-5776-08

- 1 Insert SDAR control unit (1) using studs (11) as per picture into holes on bracket (12) and fasten to bracket (12) using nuts (13).
- 2 Remove bolts (42) from emergency call system control unit (41).
- 3 Detach emergency call system control unit (41) from control unit plate.

i Do not disconnect the electrical connectors from the emergency call system control unit (41).

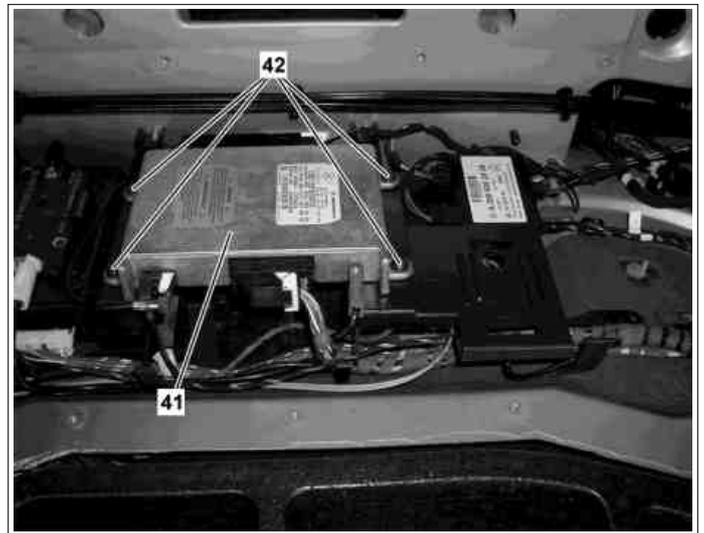

P82.60-5777-11

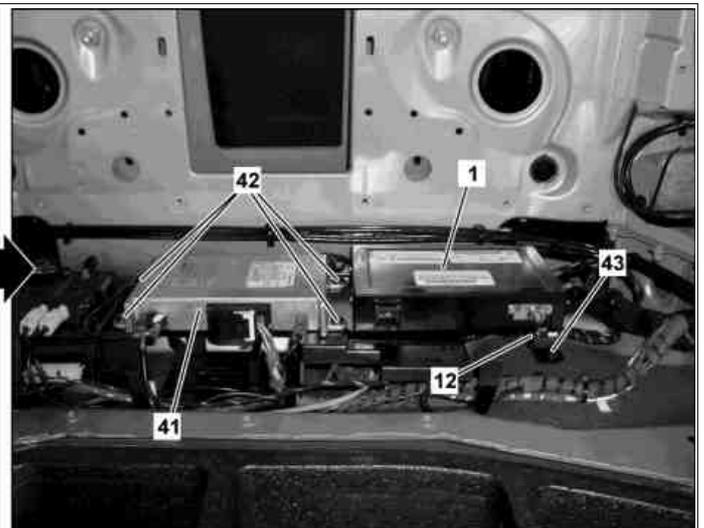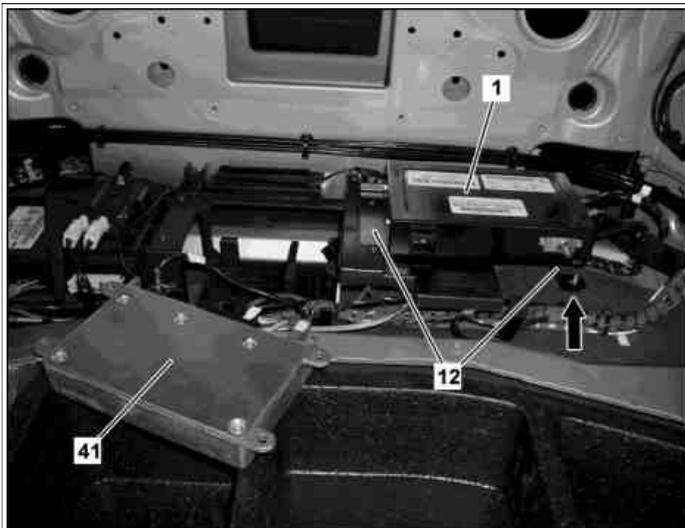

P82.60-5778-08

- 4 Position bracket (12) with SDAR control unit (1) on weld stud (see arrow) and control unit plate as per picture.
- 5 Secure bracket (12) to weld stud using plastic nut (43).
- 6 Position emergency call system control unit (41) on control unit plate and bracket (12) as per picture.
- 7 Secure emergency call system control unit (41) on control unit plate and bracket (12) using bolts (42).