



MODEL 203, 209, 211

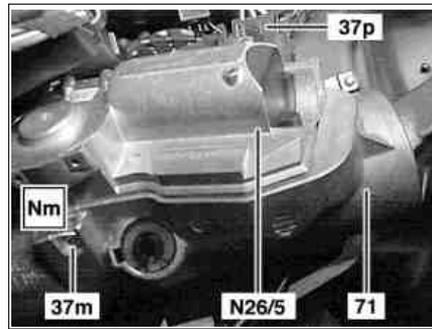

P46.10-2156-01

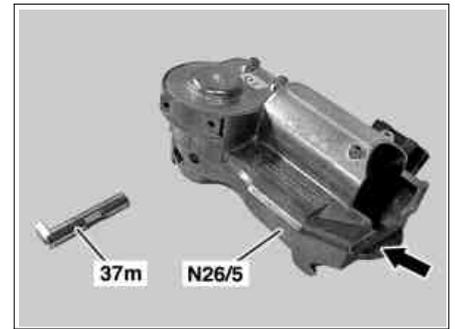

P46.10-2155-01

Modification notes

16.5.06	"Disconnect/connect ground line on battery" removed		
---------	---	--	--

	Remove/install		
1	Turn ignition key to position "1".	i The fastening bolt (37m) can only be removed if the electric steering lock control unit (N26/5) is unlocked.	
2	Remove left cover under the instrument panel	Model 211 Model 203, 209	AR68.10-P-1500T AR68.10-P-1500P
3	Turn the attachment pin (37m) to the recess and remove.	Nm Model 203 Nm Model 209 Nm Model 211	*BA46.10-P-1003-03F *BA46.10-P-1003-03M *BA46.10-P-1003-03K
4	Guide electric steering lock control unit (N26/5) backwards out of jacket tube (71)	i Installation: Move electric steering lock control unit (N26/5) with surface (arrow) forwards into the jacket tube (71).	
5	Unplug electrical connector (37p) at electric steering lock control unit (N26/5).		
6	Install in the reverse order		

Nm Jacket tube

Number	Designation	Model 203
BA46.10-P-1003-03F	Retaining pin, electric steering lock to jacket tube	Nm 10

Nm Jacket tube

Number	Designation	Model 209
BA46.10-P-1003-03M	Retaining pin, electric steering lock to jacket tube	Nm 10

Nm Jacket tube

Number	Designation	Model 211

BA46.10-P-1003-03K	Retaining pin, electric steering lock to jacket tube	Nm	10
--------------------	--	----	----