



P77.39-2090-09

Shown on model 209.4

- 1 Soft top compartment lid paneling
- 2 Cover frame
- 3 Expansion clip

- 4 Cable tie
- 5 Locking plate
- 6 Electrical connector

- S84/19 Soft top bow "locked" limit switch

☒ ☒	Remove/install		
⚠ <b>Danger!</b>	<b>Risk of injury</b> when performing check and repair work in area of roll bar	Before working in the area of the roll bar, pull out the rear head restraints by hand. Keep body parts out of the area where the roll bar extends.	AS91.00-Z-0003-01QA
⚠ <b>Danger!</b>	<b>Risk of injury</b> caused by moving parts that can <b>pinch, crush</b> or, in extreme cases, even <b>sever</b> extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
⚠ <b>Danger!</b>	<b>Risk of injury</b> caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
1	Partially open soft top	<b>i</b> Leave soft top compartment lid positioned upright	
2	Unclip left and right cover frame (2) and remove		
3	Remove expansion clips (3)		
4	Remove soft top compartment lid paneling (1)	<b>i</b> <b>Installation:</b> Ensure that soft top compartment lid paneling (1) is seated correctly.	
5	Cut cable tie (4) from bracket		
6	Remove soft top bow locked limit switch (S84/19) with locking plate (5) from bracket		
7	Disconnect electrical connector (6) from soft top bow locked limit switch (S84/19)		
8	Install in the reverse order		