


P88.70-2183-08

2 Front paneling

3 Rear paneling

4 Cap

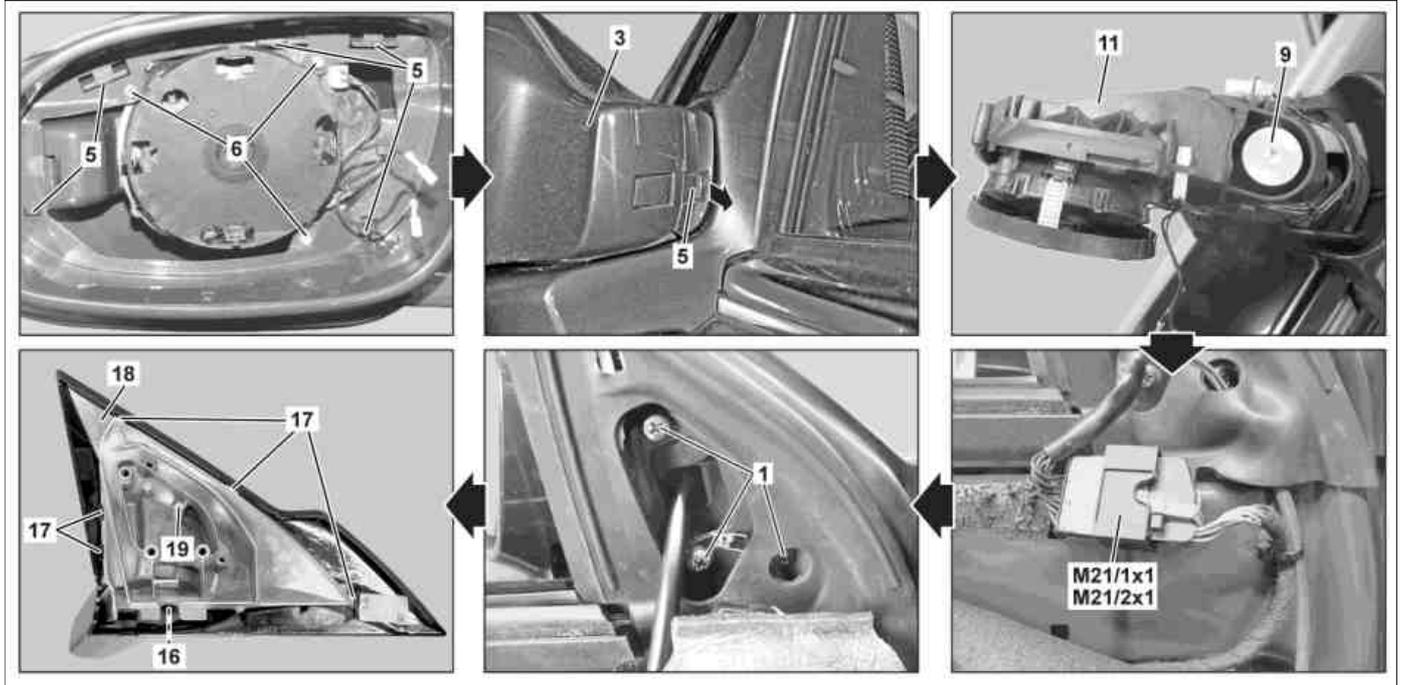

P88.70-2184-09

- 1 Bolts
- 5 Catch tabs
- 6 Bolts
- 9 Bolt

- 11 Base body
- 17 Catch tabs
- 18 Mirror base

- M21/1x1 Left electrically adjustable and heated outside mirror connector
- M21/2x1 Right electrically adjustable and heated outside mirror connector

 	Remove/install		
1	Remove mirror glass		AR88.70-P-9020Q
2	Remove additional turn signal lamp	Up to 26.3.04 As of 29.3.04	AR82.25-P-4726Q AR82.25-P-4726QA
3	Fold outside mirror toward front and unscrew bolts (6)		
4	Unlock catch tabs (5) and remove rear paneling (3)		
5	Fold outside mirror toward rear and remove paneling (2)		
6	Unscrew bolt (9)		*BA88.70-P-1002-01E
7	Remove basic body (11)		

8	Disconnect corresponding electrical connector (M21/1x1, M21/2x1)		
9	Remove cover from mirror triangle	<b>i</b> Do not remove speaker	AR82.62-P-7850Q
10	Remove bolts (1) and remove mirror base (18) with cap (4)		
11	Unlock catch tabs (17) and remove (4) from mirror base (18)		
12	Install in the reverse order		

**Nm** Outside mirrors

Number	Designation		Model 209
BA88.70-P-1002-01E	Bolt, power folding mirrors to mirror base	Nm	11